



## Code Switch Keyless Entry Programming (For Multi-Code Model 4200)

**Description:** Your Keyless Entry Unit functions similar to the hand held transmitter you carry in your car. When you enter in the four digit access code the Keyless Entry Unit sends out the same radio signal as the hand held remote does.

1. Remove the battery.
2. Press any key and wait for thirty (30) seconds. (By doing this, you are draining the keypad of its memory.)
3. Install the battery.
4. Wait for the lights behind the numbers on the keypad to turn off.
5. Press RADIO LEARN twice (2x)
6. Press 1,2,3,4.
7. Press the numbers that represent the Radio Code set in your hand held remote (or on the back of your garage door opener), these are the numbers of the coding switches that are in **On** or **Closed** position.
8. Press RADIO LEARN once (1x)
9. Wait for the lights to go off on the keypad.
10. Press 1, 2, 3, 4 and the door should activate. If not, then repeat programming beginning in step #1.
11. Wait for lights to go off on the keypad.
12. Press ACCESS LEARN twice (2x)
13. Press 1, 2, 3, 4.
14. Press your four digit password.
15. Press ACCESS LEARN once (1x).
16. Wait for the lights to off on the keypad.
17. Press your password and the door should activate. If not, then repeat programming beginning at Step #11.

---

### To change the access code:

Access	Access	1-2-3-4	5-8-3-1	Access
Learn	Learn	Old Access Code	New Access Code	Learn

- The 4 digit access code can be any combination of the numbers 0-9 from 0000-9999.
- During both programming modes the keypad will brighten with first keypress and will go out 25 seconds after last keypress. Your personal access code must be completely entered within 25 seconds of the last number you entered. If not the door will not open and the LED's will go out. If you fail to enter the entire code in the allotted time, you must re-enter the entire code.
- If the correct access code is not entered within 20 keystrokes, the Programmable Keyless Entry will "lock up" for 5 minutes. During this time all LED's will remain off and all keypad input is ignored. This is a built in feature to discourage unauthorized tampering.
- If you forget your programmed access code, disconnect the battery from keyless entry, depress any key on the keypad and wait 30 seconds before installing battery. The keyless entry will reset to the factory radio and access codes. You must reprogram both the radio and access codes at this time.